



#1

CP05 PALM CONTROL



#3



#2

Maintenance and Battery Replacement



#4

Normal maintenance for the CP05 is cleaning the shaft of the steering grip and the switches on the grip. Use only a damp cloth. After a period of approximately two (2) years the transmitter battery in the grip should be changed. To replace the battery, remove the three (3) screws holding the grip cap in place #1. With a fine Phillips screwdriver, unscrew the transmitter from inside the cap #2. Replace the battery with the recommended 32A 12v battery #3. Make sure the polarity matches when inserting the new battery. Reassemble in reverse order and test. If functions work, you are done. If functions do not work continue to the “learning” process.

“LEARNING” the transmitter to the receiver.

With vehicle key power ON, press and release the LEARN button #4 (under the 3 conductor wiring harness on the gray relay box under dash). Press and release the horn button on the grip. Wait 15 seconds then verify operation of all functions.

Manufactured and Distributed By **dSi** Driving Systems Incorporated
16139 Runnymede Street
Van Nuys, CA 91406
Info@drivingsystems.com
Tel: 818-782-6793 FAX: 818-782-6485