


## Test procedure for Autoadapt Menox Solenoid and brake latch.


1. Check the 2 wires coming from the solenoid. 1 should be power and 1 should be ground WHEN BRAKE IS APPLIED and button depressed on hand control grip



2. Use a sharp tool to test movement of upright and slider. Make sure they slide freely and return to normal position.

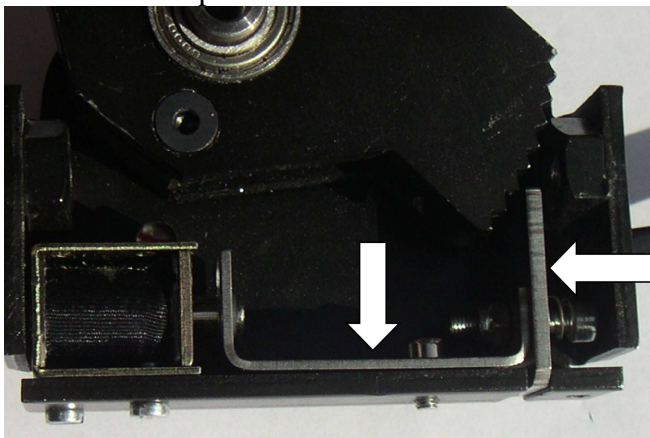

3. Check 2 screws under base that holds solenoid from moving.

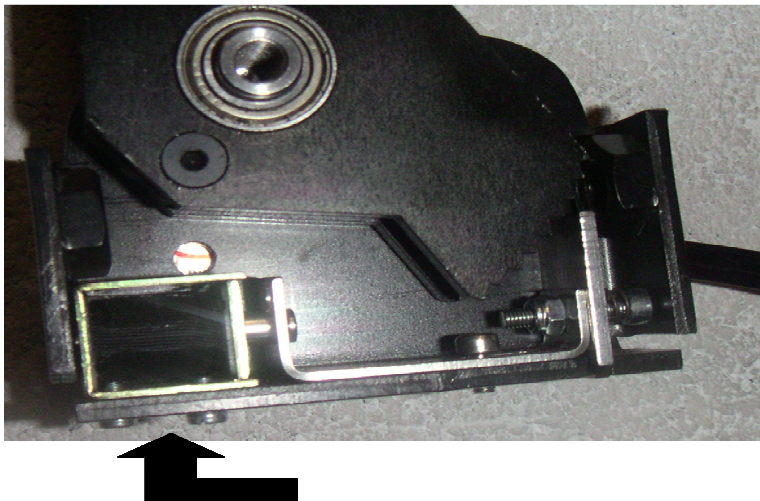

If all of this is ok then the solenoid is bad