


CP05
Installation Highlight #2

INSTALLATION WARNING

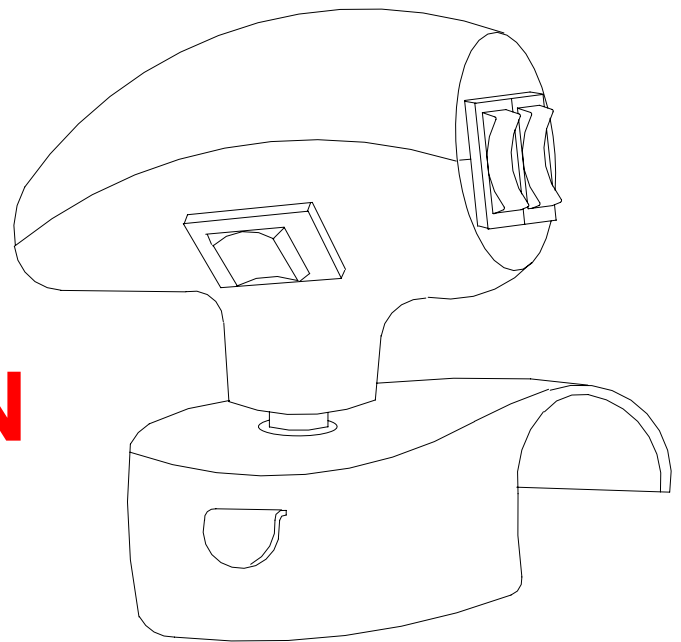

Please note when checking each circuit.

Be specific:

- 1) Isolate the wires of a function and test OEM switches for working voltage.
- 2) Test the operations by manually making the wire connections to assure the correct wires are being used.
- 3) Verify that the CP05 connecting circuit provides the same voltage
- 4) Make the splice or connection and test.

Notes for installation:

- 1) Newer vehicle can have unreliable wiring diagram from the manufacture.
- 2) Newer vehicles can have unique wiring arrangements, some European vehicles do not allow for modifications without warranty violations.

U.S. DISTRIBUTOR



16141 Runnymede Street
Van Nuys, CA 91406-2913
TEL:(818) 782-6793
FAX:(818) 782-6485
E-MAIL: info@drivingsystems.com